

FITTING INSTRUCTIONS

Clear Top – Flat and Curved

Your ProCan door canopy kit contains:

items	qty
Template	1
Polycarbonate Sheet	1
Support Poles	2
Cross Bars	2
Fixing Kit	1




INSTALLATION

Please note:

1. Position the template centrally over the door opening and at the desired height. Use the middle of three holes at one end of the template to temporarily secure the template to the wall. Ensure the template is level and secure using the middle of the three holes at the other end of the template.

Use the 4 remaining pre-drilled holes as a guide using a 10mm masonry bit as per standard Rawlplug fixings. Unscrew and remove the template.

3. Fit the plastic end caps to the support poles. Fix the support poles to the wall using the fixings provided but do not fully tighten the screws yet.
4. Place the two cross bars over the studs of the support poles with the vertical side of each bar facing outwards.
7. Push a rubber seal onto each of the round spacers and clamps. Place a spacer onto each of the pole studs with the rubber seal facing upwards.
5. Remove the film from one side of the polycarbonate sheet and place the sheet with the clean face downwards onto the spacers with the studs passing through the pre-drilled holes in the sheet.
6. Working from the centre outwards place the threaded glass clamps on top of the polycarbonate sheet (with the rubber spacer facing downwards) and loosely tighten them onto the pole studs.
7. Remove the film from the top of the polycarbonate sheet and fully tighten the pole fixings and then all the glass clamps.
8. To guarantee a slight fall towards the front of the canopy, stainless steel washers can be inserted between the wall and the top fixing of each support pole.

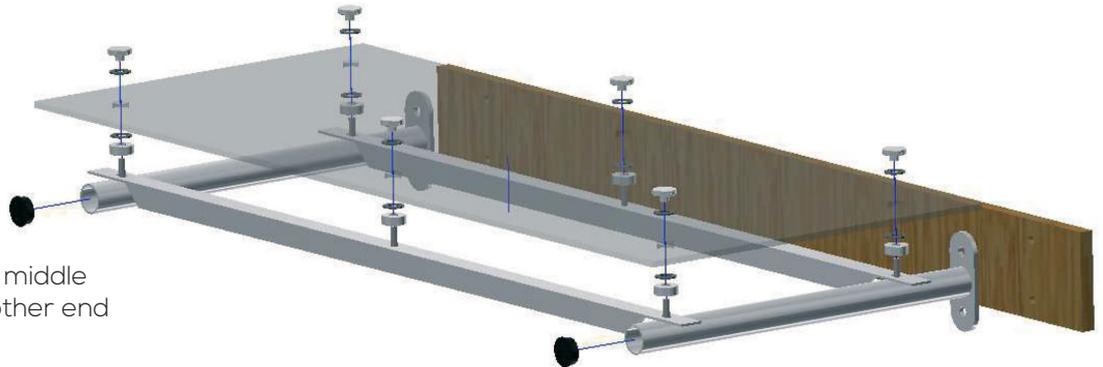

Handling

ClearTop packages can usually be carried manually. If mechanical handling equipment is used, always use suitable battens or bearers to protect the product.

Storage

Remove the protective packaging only when fixing is imminent.

Care should be taken not to damage the surface of the fittings and roof.

Always store the ClearTop packages in a dry store room, individually laid flat.

Maintenance

Regular cleaning of the canopy will extend the life of the exposed surfaces. All surfaces can be cleaned with a dilute solution of mild liquid detergent and warm water, rinsed off with clean water.

Abrasive cleaners, wire wool or scourers should not be used to clean the canopies

These instructions do not absolve the installer of the responsibility of checking the suitability of the chosen fixings are compatible with the wall construction. All fixings are to be installed in strict accordance with the manufacturer's instructions.