


Your ProCan door canopy kit contains:

items	qty
Canopy	1
Gallows Brackets	2
Fixing Kit	1

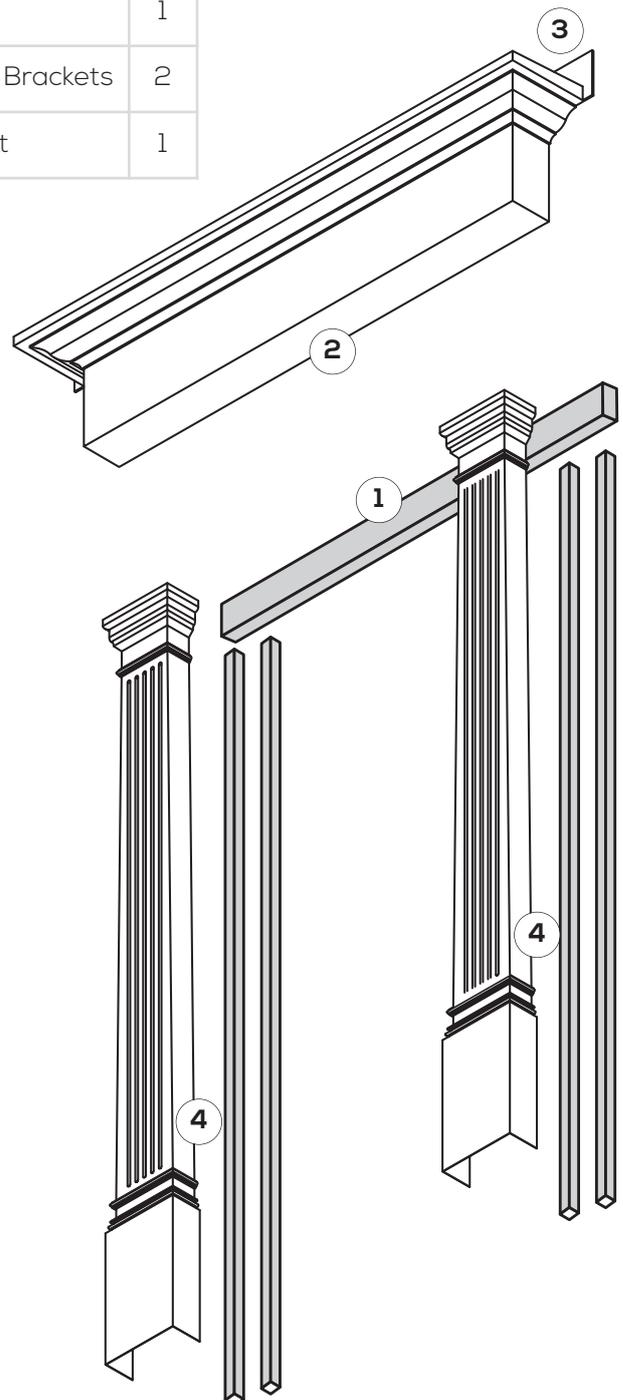

#### INTALLATION

1. Make up a three-piece timber rail and secure it firmly to the wall to suit the size of the GRP door surround. The batten size must fit into the groove in the back of the pilasters. The rail sides must be the same height as the pilasters.
2. Sit the internal frame of the door head onto the horizontal rail section so that the rear edge of the soffit fits over the rail.
3. Use a 10mm bit to drill through the GRP upstand into the wall at maximum of 450mm centres. Insert an 80mm wall plug into each hole and fully screw the upstand to the wall. Caps are provided to cover all fixings
4. The pillasters are fixed to a timber batten running the full height of the pillaster and fixed into the reveal jamb if applicable. The upstand must be over flashed in lead or mastic sealed.

### **Handling**

Mouldings can usually be carried manually. If mechanical handling equipment is used, always use suitable battens or bearers to protect the product. Remove the protective packaging only when fixing is imminent. Care should be taken not to damage the surface of the GRP.

### **Storage**

Always store the canopy on its back i.e. with the fixing flange face downwards, covered and dry. If stored externally, do not expose to direct sunlight whilst inside the packaging.

### **Maintenance**

GRP is low maintenance and will not require regular painting or decorating. To maintain its finish we advise cleaning periodically using an ammonia free detergent solution. Abrasive cleaners, wire wool or scourers should not be used as they may scratch the finished surface.